BRAUN

CitrusQuick 1

Type CJ301AI

Register your product
www.braunhousehold.com/register

CJ 3000
Citrus juicer

English 4
عربي 7

© Copyright 2021. All rights reserved
De'Longhi-Braun-Household GmbH
Carl-Ulrich-Straße 4
63263 Neu-Isenburg/Germany

5722610116/09.21 CJ 3000 GB GCC
UK/Arab

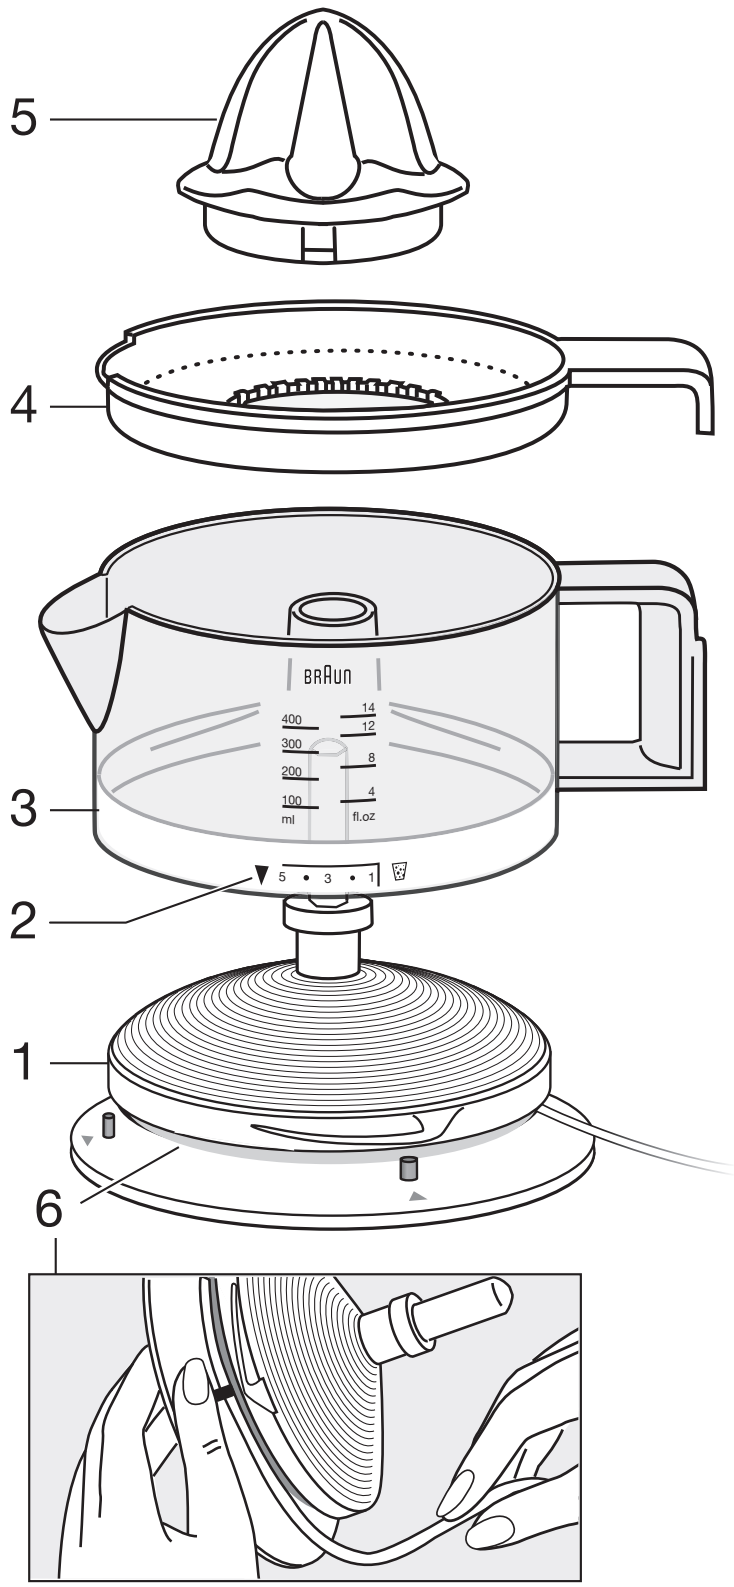
5
4
3
2
1
6
BRAUN

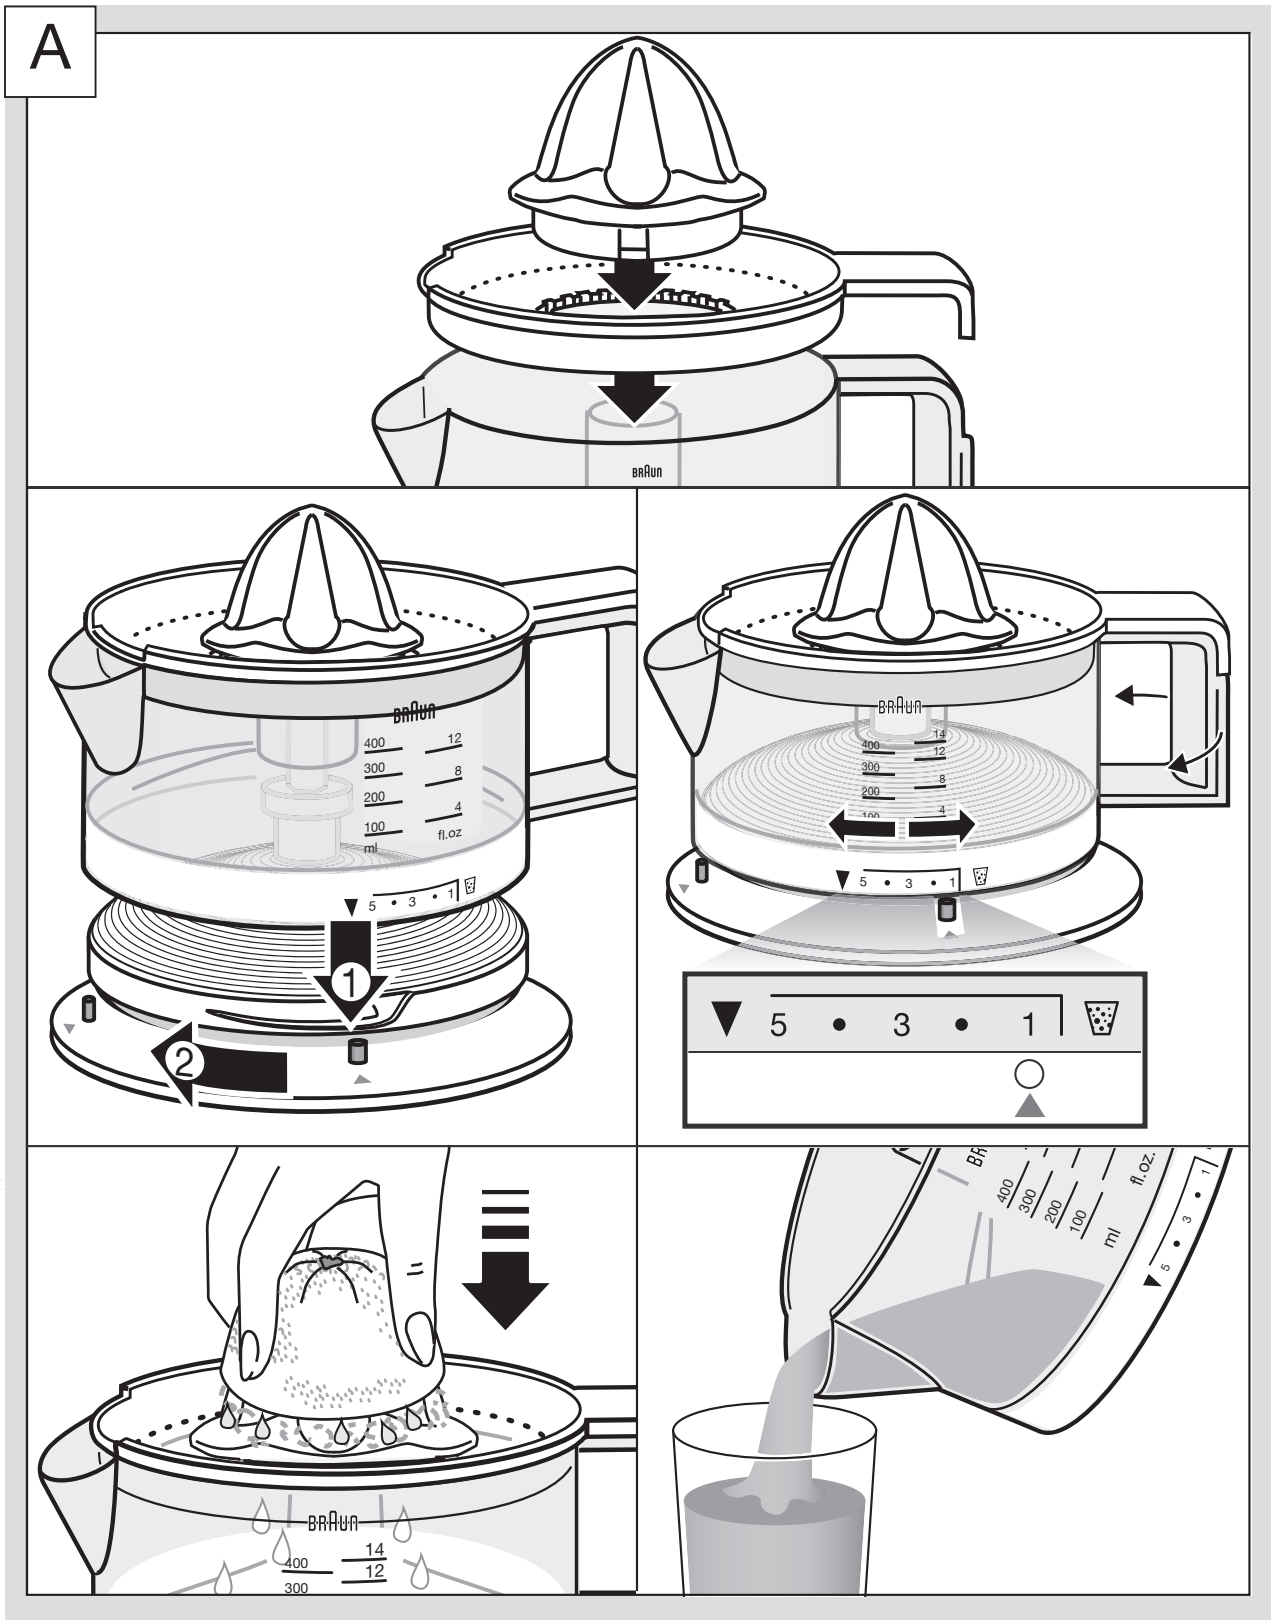
A
BRAUN
5 • 3 • 1

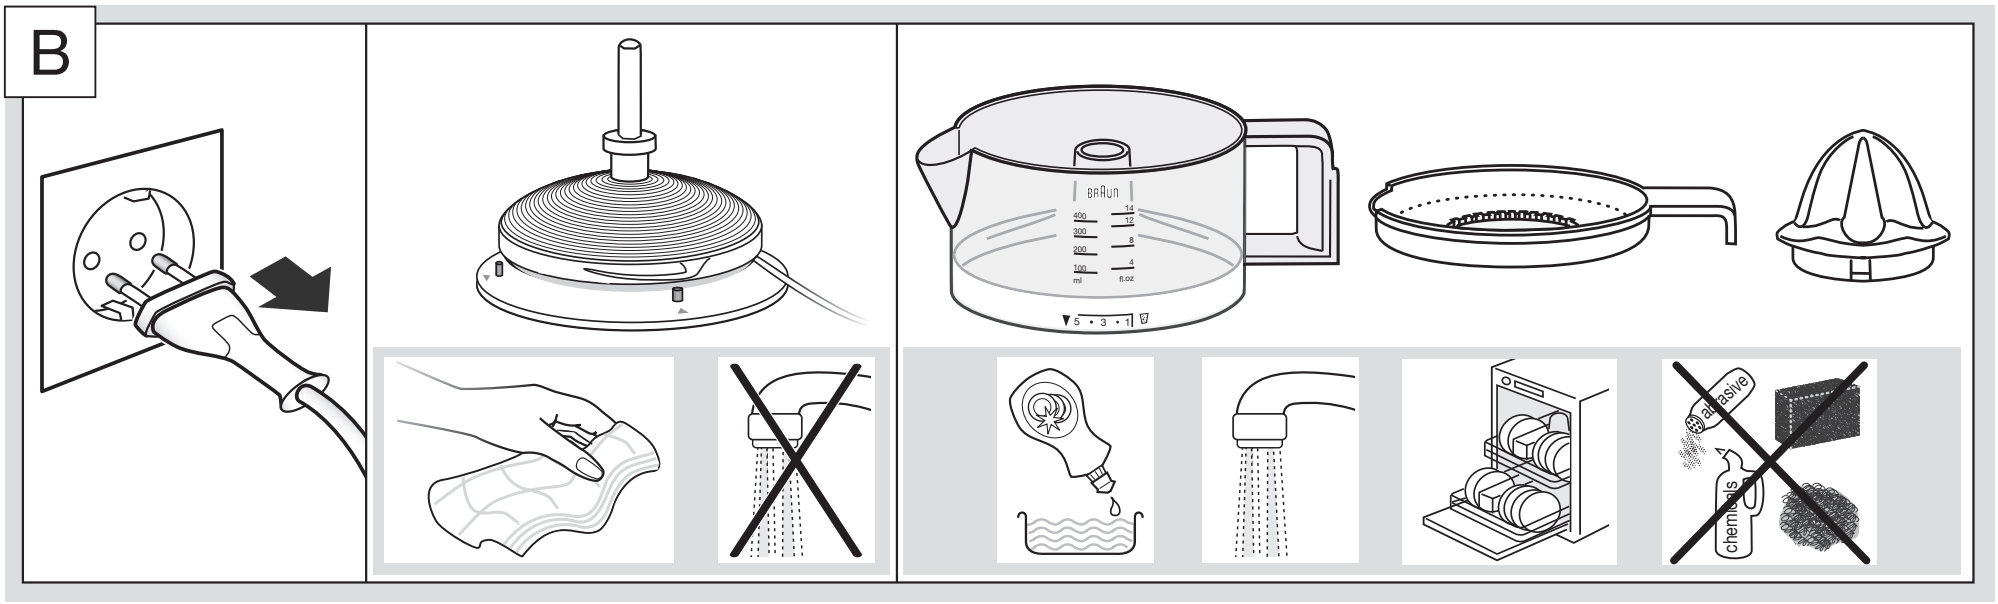
B
abrasive
chemicals

English

Before Use

Please read the user instructions carefully and completely before using the appliance and retain for future reference. Remove all packaging and labels and dispose them appropriately.

Caution

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children younger than 8 years shall be kept away from the appliance and its mains cord.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and unplug the appliance when it is left unattended and before assembling, disassembling, cleaning and storing.
- Never immerse the unit in water or other liquids.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance.
- This appliance is designed for household use only and for processing normal household quantities.
- Do not use the appliance for any purpose other than the intended use described in the user manual. Any misuse may cause potential injury.
- Please clean all parts before first use or as required, following the instructions in the Care and Cleaning section.
- Important: Keep all packaging (plastic bags, polystyrene foam) away from children.

Description

1 Motor block
2 Pulp scale
3 Jug
4 Strainer
5 Cone
6 Cord storage

Maximum capacity: 400 ml

(A) Extracting juice

(For details refer to fig. A)

- When the fruit is pressed down, the motor will start.
- When removed from the cone, the motor turns off automatically.
- Switching the motor on and off by lifting and pressing down the fruit, can cause the cone to change directions and increase the amount of juice extracted.
- Before serving the juice, remove the jug from the motor block.

Adjustable fruit pulp content
The amount of fruit pulp in the juice can be continuously adjusted by turning the jug (3) within the pulp scale (2):
5 = high fruit pulp content,
1 = low fruit pulp content.

(B) Care and Cleaning
(For details refer to fig. B)

Warranty and Service

For detailed information see separate warranty and service leaflet or visit www.braunhousehold.com.

Subject to change without notice.

Please do not dispose the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.

Materials and accessories coming into contact with food conform to EEC regulation 1935/2004.

For UK Only

Guarantee Information

All Braun Household products carry a minimum guarantee period of two years. The rights and benefits under this guarantee are additional to your statutory rights which are not affected.

Please keep your receipt as this will form the basis of your guarantee.

In the unlikely event of a breakdown you have access to professional help from our team simply by calling:

0345 222 0458

For service in the Republic of Ireland please call:

012475471

Braun Household undertakes within the specified period to repair or replace any part of the appliance, free of charge (with the exception of any glass or porcelainware incorporated in the product) found to be defective provided that:

- We are promptly informed of the defect.
- The product is used and maintained in accordance with the User Instructions.
- The appliance has not been altered in any way or subjected to misuse or repair by a person other than an authorised service agent for Braun Household.
- No rights are given under this guarantee to a person acquiring the appliance second hand or for commercial or communal use.
- Any repaired or replaced appliance will be guaranteed on these terms for the unexpired portion of the guarantee.
- The need for repair has not been caused by insufficient aftercare or cleaning: or damage caused by the chemical or electrochemical effects of water.

Under no circumstances shall the application of this guarantee give rise to the complete replacement of the appliance or entitle the consumer to damages.

Braun Household, New Lane, Havant,
Hampshire PO9 2NH

www.braunhousehold.co.uk

Thank You for choosing Braun. We are confident that you will get excellent service from this product.

TO IMPROVE YOUR EXPERIENCE
Register now at www.braunhousehold.co.uk
By registering we may send you from time to time details on exclusive offers, promotions, recipes and inside tips.

5 = محتوى لباب فاكهة عالي،
1 = محتوى لباب فاكهة منخفض،

العناية والتنظيف (B)

(لمزيد من التفاصيل راجع الشكل B)

الضمان والخدمة

للحصول على معلومات تفصيلية، انظر نشرة الضمان والخدمة المنفصلة أو تفضل بزيارة www.braunhousehold.com.

قابل للتغيير بدون إشعار.

يُرجى عدم التخلص من المنتج ضمن المخلفات المنزلية عند نهاية فترة الصلاحية للاستخدام. يمكن أن يتم التخلص من الجهاز في مركز خدمات Braun أو في نقاط التجميع المناسبة التي توفرها دولتك.

عربي

قبل الاستخدام

يُرجى قراءة تعليمات الاستخدام بعناية وبشكل تام قبل استخدام الجهاز والاحتفاظ بها للرجوع إليها في المستقبل. أزل جميع مواد التغليف والملصقات وتخلص منها بشكل مناسب.

تنبيه

- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين تبلغ أعمارهم 8 سنوات فأكثر، كما يمكن استخدام هذا الجهاز بواسطة الأشخاص ذوي الإعاقات الجسدية أو القدرات النفسية أو العقلية المحدودة أو ممن لديهم تجربة قليلة ومعرفة محدودة، وذلك إذا تم إرشادهم أو تدريبهم على استخدام الجهاز بطريقة آمنة، وإذا كانوا على دراية بالمخاطر التي ينطوي عليها استخدام الجهاز.
- يجب ألا يعبث الأطفال بالجهاز.
- يجب ألا يقوم الأطفال بالتنظيف والصيانة إلا إذا كانت أعمارهم أكبر من 8 سنوات ومع وجود إشراف عليهم.
- يجب إبقاء الأطفال الذين تقل أعمارهم عن 8 سنوات بعيدًا عن الجهاز وعن سلك التيار الكهربائي الخاص به.
- إذا كان سلك التيار الكهربائي تالفًا، فيجب استبداله بواسطة جهة الصُنع، أو وكيل الخدمة التابع لها، أو بواسطة شخص يتمتع بخبرات فنية مماثلة، وذلك بغرض تفادي أية مخاطر.
- يجب دائمًا إيقاف تشغيل وفصل لجهاز عند تركه دون رقابة وقبل التركيب وحال التجميع والفك والتنظيف والتخزين.
- يُحظر نهائيًا غمر الوحدة في الماء أو السوائل الأخرى.
- قبل توصيل الجهاز بمأخذ، يجب التحقق من أن الجهد الكهربائي للتيار لديك يتوافق مع قيمة الجهد الكهربائي المطبوع على الجزء السفلي من الجهاز.
- تم تصميم هذا الجهاز للاستخدام المنزلي فقط ولأغراض تحضير الكميات المنزلية الطبيعية.
- لا تستخدم الجهاز لأي غرض آخر غير الغرض الموضح فى دليل المستخدم. أي سوء استخدام قد يسبب إصابة محتملة.
- يرجى تنظيف كل الأجزاء قبل أول استخدام أو على النحو المطلوب، مع اتباع الإرشادات الموجودة في قسم الرعاية والتنظيف.
- هام: حافظ على جميع العبوات (أكياس البلاستيك، ورغوة البوليسترين) بعيدًا عن متناول الأطفال.

الوصف

1 وحدة المحرك
2 مقياس اللباب
3 الإبريق
4 المصفاة
5 المخروط
6 مكان تخزين السلك

الحد الأقصى للسعة: 400 مللي

استخراج العصير (A)

(A لكشلا عجار ليصافتلا نم ديزمل)

- عندما يتم الضغط على الفاكهة لأسفل، سوف يتم تشغيل المحرك.
- عند إزالتها من المخروط، فسيتوقف المحرك عن التشغيل تلقائيًا.
- يمكن أن يؤدي تشغيل المحرك وإيقافه بواسطة الرفع عن ضغط الفاكهة وضغطها لأسفل إلى تغيير المخروط للاتجاهات وزيادة كمية العصير المستخرج.
- قبل تقديم العصير، أزل الإبريق من وحدة المحرك.

محتوى لباب الفاكهة القابل للتعديل

يمكن ضبط كمية لباب الفاكهة في العصير بشكل مستمر عن طريق تدوير الإبريق (3) داخل مقياس اللباب (2):